

FUJIKOKI

C type (Angle Type) Expansion Valve (R134a)

HOW TO CHOOSE ?

This application contains only basic information about the car.

• Check the piping connection between!


Compressor --- (INLET) Expansion Valve (OUTLET) --- Evaporator

• It should match the connection mentioned above.

• Alternatively, please verify the part number (model number)

or the connection of the existing expansion valve."

No.	Called	Model	Ton	Capirary(mm)	screw unit	Inlet	Outlet	Car Compatibility
1	3/8" Flare	CAE-1034QEX	1.0	180	inch	5/8"-18UNF	3/4"-16UNF	Universal type
2		CAE-1534QEX	1.5	180	inch	5/8"-18UNF	3/4"-16UNF	Universal type
3	3/8" Oring	CBE-1034QEX	1.0	180	inch	5/8"-18UNF	3/4"-16UNF	Universal type
4		CBE-1534QEX	1.5	180	inch	5/8"-18UNF	3/4"-16UNF	Universal type
5	5/16" Oring	CBE-10QFKT-1	1.0	250	inch	9/16"-18UNF	3/4"-16UNF	TOYOTA, HONDA, SUZUKI
6		CBE-15U4Q	1.5	180	Inch	9/16"-18UNF	3/4"-16UNF	TOYOTA, HONDA, SUZUKI
7	M16/M20 Oring	CBE-10QTX-1	1.0	180	mm	M16-1.5	M20-1.5	NISSAN, MITSUBISHI, MAZDA, SUZUKI
8		CBE-15KMQEX	1.5	180	mm	M16-1.5	M20-1.5	NISSAN, MITSUBISHI, MAZDA, SUZUKI
9	M16/M22 Oring	CBE-10K4QEX-1	1.0	180	mm	M16-1.5	M22-1.5	TOYOTA, HONDA
10		CBE-15K4QEX-2	1.5	250	mm	M16-1.5	M22-1.5	TOYOTA, HONDA

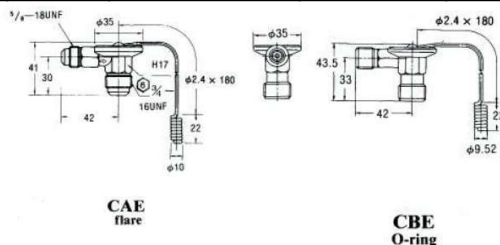

FUJIKOKI